ASCII MODE

In ASCII mode each probe needs its master device, chaining multiple probes is not possible. The USB and the M8 version can both be used in ASCII mode. This mode is best suited to configure a device by using a simple RS232 terminal program like the "Terminal" integrated with Vmux LITE (1 instrument), available free of charge on www.sylvac.ch.

The USB version creates à virtual COM port (recent operating systems automatically install an appropriate FTDI driver) for direct communication with the probe. The M8 version needs an RS485 differential line driver. An USB-to-RS485 converter is available from Sylvac.

Connection parameters: 115'200Bd, 8 data bits, no parity, one stop bit (115'200 8N1)

Data packet description: An ASCII command is composed of one or more printable and case insensitive ASCII characters. Each command must be terminated by a carriage return character (ASCII 0x0D). The device's response follows the same format.

ASCII commands

? Get the probe's present position ID? Get the instrument's identifier

MM / IN Change the measurement unit to millimetres/inches

UNI? Get the measurement unit

SET Set zero at the current position (zero preserved, even if disconnected)

SN? Get the device's serial number

SUM? Get the filtering parameter value (number of samples for moving average filter)

SUM 1 / 16 / 256 Set the filtering parameter value

VER? Get the firmware version

Error codes

Code	Error	Explanation	Solution
ERR1	Parity error	Parity error in RS-232 communication	Check your connection parameters
ERR2	Unknown command	The command is not supported	
ERRC	Condensation	Capacitive measurement error	Dry your device and try again
ERRD	Drops	Inconsistent capacitive measurement	Move the probe and try again
ERRE	Saturation	AD converter error	Restart the probe. If the error is still present, the probe must be reinitialised at the factory

Examples

Master (PC)	Device (probe)	Remarks
?\r	+09.52572\r	Typical response from P12DHR
VER?\r	r2.03 16.07.2018\r	Firmware version may be different



MBUS MODE

The MBus protocol allows the connection of up to 31 devices on the same data bus. Simple T-adapters can be used to extend the data bus. The master can use broadcast commands to address all the devices on the bus and get synchronised measurement values from multiple devices.

Connection parameters: 187'500Bd, 8 data bits, odd parity, one stop bit (187'500 8O1)

Data packet description:

Command frame

Break	Function code (1B)	Address (1B)	Data (0n Bytes)
-------	--------------------	--------------	-----------------

Response frame

Function code (1B)	Data (1n Bytes)

Frror frame

'!' (ASCII 0x21)	Exception code (1B)
------------------	---------------------


New devices on the data bus can be found using the Notify command. The freshly connected probe will respond to the command if it is moved at least 1mm. The answer contains its identifier which is needed to set a temporary, short address for the new device by issuing the SetAddress command.

The MBus protocol is compatible with Solartron ORBIT® protocol. For a complete list of supported commands see ORBIT® Protocol Description.



Connection examples

The following picture illustrates some possible connections of the Sylvac digital probes

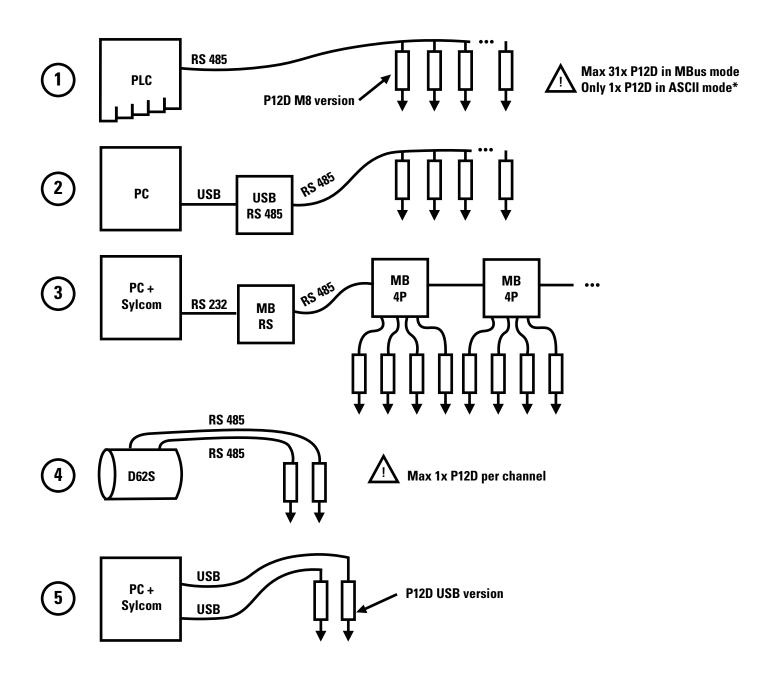


Only the USB version of the probe can be connected directly to a PC using one USB port per device (example no. 5). The M8 version is intended for industrial equipment, such as Programmable Logic Controllers (PLC) or the Sylvac D62S display unit. It needs a converter to be connected with a PC.

^{*} Digital probes in ASCII mode are not addressable, thus only one device can be used on each bus.




Hardware

Connectors



PIN	Signal	Description
1	VCC	Positive power supply (5V)
2	D-	Negative data line
3	D+	Positive data line
4	GND	Negative power supply (0V)

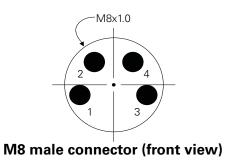

PIN	X [mm]	Y [mm]
1	-1.70	-0.50
2	-1.08	1.45
3	1.70	-0.50
4	1.08	1.45

PIN	Color	Signal	Description
1	Brown	VCC	Positive power supply (3.525V)
2	White	А	RS-485 negative data line
3	Yellow	GND	Negative power supply (0V)
4	Green	В	RS-485 positive data line
Shield	Braid	PE	Protective Earth (shielding)

Cables

USB cable length must not exceed 5m. Any USB 2.0 compatible extension can be used. The M8 version supports up to 100m total bus length. Use only shielded 4 pin M8 extension cables.

Electrical specifications

Power supply voltage (VCC) Current consumption (ICC) Differential output voltage (VOD) 3.5 V – 25 V 2.5 mA min 1.5 V device can be USB-bus-powered VCC = 5V (add 17 mA for USB interface) $R \ge 27\Omega$ (only for M8 version)